

Roll-Up III™ Quick Start

Package Contents

Verify that your Roll-Up III package includes the following:

- ✓ Roll-Up III digitizing tablet
- ✓ Transducer (stylus, 4-button cursor, or 16-button cursor)
- ✓ USB Cable
- ✓ CD with drivers and diagnostics (varies with configuration)
- ✓ Accessory case – **Do Not Discard**
- ✓ Cardboard tube, insert and end caps – **Do Not Discard**

Optional items, purchased separately:

- ✓ Computer interface cable with 9-pin connector for RS-232 serial connection
- ✓ Power supply – required only for serial installations
- ✓ Deluxe Travel Bag

Hardware Configuration

Note


Setup the hardware connections for USB or serial *FIRST*, following the instructions below, then install the software.

Installing Your Roll-Up III

The following instructions describe how to set up your Roll-Up III. Select a large, flat, non-metal surface on which to place the Roll-Up III. Clear all items from the surface.



Conductive materials, inks, or electronic devices on, under, or near the Roll-Up III can cause improper operation.

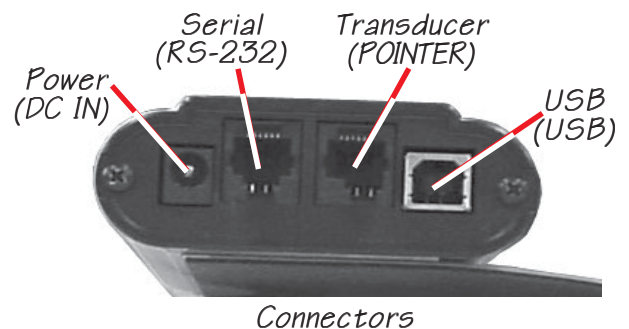


Note

Connect *only* USB or Serial—not both.

USB Connection

 —With *TabletWorks* CD only—

- 1 Connect the transducer – cursor or stylus – to the appropriate jack on the digitizer’s Connector Panel. The connector is keyed and will fit only the correct jack. Do not force it.
- 2 Connect the USB interface cable to the USB jack on the Roll-Up III Connector Panel. The connector is keyed and will fit only the correct jack. Do not force it.
- 3 Connect the other end of the USB cable to any one of the USB ports  on your computer or USB hub. The digitizer will beep four short tones, indicating it is powered On.

Note

Power is supplied through the USB port. No additional power source is needed for this installation.

Windows displays the *Found New Hardware* prompt.

- 4 Follow the prompts to finish the *Found New Hardware* process.

-OR-

Serial Connection

- 1 Connect the transducer – cursor or stylus – to the appropriate jack on the digitizer’s Connector Panel. The connector is keyed and will fit only the correct jack. Do not force it.
- 2 Plug the power supply into an AC outlet. Connect the power supply to the appropriate jack on the Connector Panel. The digitizer will beep four short tones, indicating it is powered On
- 3 Connect the RS232 serial cable to the serial jack on the connector panel. The connector is keyed and will fit only the correct jack. Do not force it. Connect the 9-pin connector of the serial cable to the serial port on your computer.
- 4 To prepare the tablet for driver support, use the transducer to click on the SuperSet Code **S** **0** **1** on the SuperSet Menu.
- 5 Move the cursor or stylus aside, making sure it is not in the active area of the Roll-Up III.

Software Configuration

Note

If you need to configure your Roll-Up III for use with a third-party application, please refer to the installation instructions in the *Roll-Up III User’s Guide*, or the Roll-Up III Help file.

Software drivers provide the communication bridge between your software application and the Roll-Up III. If you received a CD with your Roll-Up III, it will either be a GTCO CalComp-supplied CD, or a third party CD provided by the software application vendor. The driver does not need to be installed if you are using the Roll-Up III with the GTCO CalComp QuikRuler.

Installing the Driver

Insert the CD into the CD-ROM drive on your computer and follow the onscreen prompts to complete the driver installation.